



# ZVS-10

## *Digital Key Immobiliser System*

### **OWNER'S MANUAL**

*The ZVS-10 Digital Key Immobiliser is Certified to comply with the Australian Standard AS/NZS 4601:1999.*

*Certificate of compliance No: 677*

*To meet the requirements, it must be installed according to the full requirements of the AS/3749.2 Installation Standard.*

7/00 – ZYLUX ZVS-10



Congratulations on purchasing the ZYLUX ZVS-10 Digital Key Immobiliser System.  
Please read the instructions in this booklet carefully to familiarise yourself with its operation

#### Glossary Of Terms

Arming	To set the system in readiness and waiting.
Disarmed	Switching the immobiliser Off
Circuit	Your Vehicle's Electrical Wiring
LED	Light Emitting Diode, the little red light on the socket into which you insert the code plug

## FEATURES

- **Passive Arming Immobilisation** – Your vehicle automatically immobilise's itself.
- **2 Circuit Interruption** – Certain appropriate electrical circuits are immobilised.
- **LED Status Display** – Your LED's action displays vehicle status.
- **Disarming by unique Code-Plug** – De-activate immobiliser using code-plug.
- **Last Code-Plug Control Deletion** – Allows you to delete the code of a lost plug.
- **Authorised Code-Plug Duplication** – Duplication only by authorised agents.
- **65,000 Digital Coding Variations** – 65,000 different codes are available

## **ARMING THE IMMOBILISER**

- Simply turn 'OFF' your ignition. After approximately 30 seconds your immobiliser will 'ARM' itself, thereby disabling 2 of your vehicles circuits.
- The red LED on the code pin socket flashes continually indicating your immobiliser is armed.
- Your vehicle will not start.
- Exit your vehicle with confidence knowing it is immobilised and any attempts to start the engine will fail.

## **DISARMING THE IMMOBILISER**

- Simply insert your code-plug into the dash mounted socket.
- The red LED on the socket will turn 'OFF', indicating the immobiliser is turned 'OFF'.
- Remove the code-plug and start your vehicle
- If you do not start your vehicle within 30 seconds of disarming the immobiliser, the system will automatically re-arm.

## **LOST DIGITAL KEYS**

Your ZVS-10 is supplied with two Digital Keys. Should one of your Digital Keys get misplaced, your nearest Zylux agent can delete that particular code from the system rendering it "useless" should it fall into the wrong hands.

## **ADDITIONAL DIGITAL KEYS**

Should you require additional Digital Keys, contact your nearest Zylux agent who can both supply and re-code them to your vehicle.