

*Model: ZVS-280*



# ***OWNERS MANUAL***



**Remote Controlled Keyless Entry /  
Immobiliser System**

12/03 – ZVS-280

Thank you for purchasing the ZVS-280 Keyless Entry / Immobiliser System. Please carefully read this Owners Manual to familiarise yourself with the operation of this system.

The ZVS-280 can also be upgraded to a full house alarm system which includes door, boot and bonnet protection. It also includes a dual stage shock sensor which detects light and heavy impact to the vehicles body. For further information regarding this upgrade, please speak to your authorised installer.


## **CONTENTS**

<i>Arming (locking) / Disarming (Unlocking)</i>	<i>Page 2</i>
<i>Standard Features</i>	<i>Page 3</i>
<i>Selectable Features / Override Procedure</i>	<i>Page 4</i>

### **Arming (Locking)**

Press Button 1 on the remote transmitter, the indicators (or parking lights) will flash once and the doors will lock (\*optional). Vehicle will be immobilised if starter disable is connected (\*optional)  
The dash mounted LED will begin to flash once per second.

#### **Remote Transmitter**

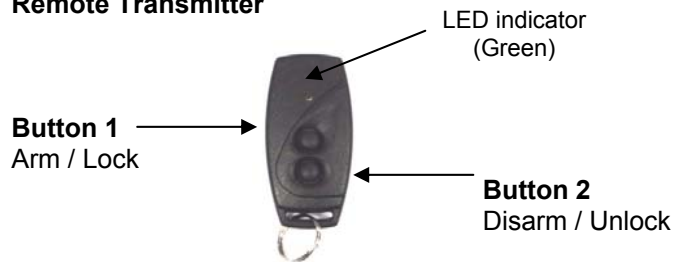

### **Disarming (Unlocking)**

Press Button 2 on the remote transmitter, the indicators (or parking lights) will flash twice and the doors will unlock (\*optional). Immobiliser will be deactivated if starter disable is connected (\*optional)  
The dash mounted LED will stop flashing.

## FEATURES

\* **Starter Disable / Immobiliser** – Once the Keyless Entry / Immobiliser system is activated, the vehicle will be immobilised. The starter motor circuit will be interrupted. .

**Panic / Car Finder** - When activated, the indicators (or parking lights) will flash continuously.

To activate the *Panic / Car Finder* feature, press and hold Button 1 for two seconds.

To deactivate this feature, press Button 2.

**LED** - The dash mounted LED will flash at a rate of once per second once the Keyless Entry / Immobiliser is activated.

**Valet / Service Mode** - Valet / Service mode disables the Immobiliser system.

To activate Valet / Service mode, turn the ignition ON, close all the vehicles doors and press and hold Button 2 for two seconds. The indicators (or parking lights) will flash once and the LED will turn solid Red to indicate the system is in Valet / Service Mode

To deactivate Valet / Service mode, turn the ignition ON, close all the doors and press and hold Button 2 for two seconds. The indicators (or parking lights) will flash twice and the LED will turn OFF to indicate that Valet / Service mode has been deactivated.

\***Omni Lock** - The vehicles doors can be locked and unlocked by using the remote transmitter whilst the ignition is on. (\*Note: Vehicle must be equipped with central locking)

**Last Stage Arming Memory** – If the Keyless Entry Immobiliser System is armed and the vehicle's battery is disconnected, when the battery is re-connected the Immobiliser system will remain armed.

**Remote Control Code Learning** – The Keyless Entry Immobiliser System can hold up to four Remote Controls. At any time a lost or stolen remote transmitter can be deleted from memory by your authorised installer.

\* **Locking Outputs** - If your vehicle is equipped with central locking, the Immobiliser system can be connected so the doors will lock when the Immobiliser is armed and unlock when disarmed.

\* **Remote Boot Release** - Press and hold Button 2 for two seconds to activate this feature.

(Vehicle must contain electronic boot release for this feature to work)

\* **Optional Features - Additional parts and labour may be required.**

## SELECTABLE FEATURES

The features listed below may be configured at the time of installation.  
These features can only be programmed by your authorised installer.

**Ignition Safety Door Lock / Unlock** - If all doors are closed when the ignition key is turned to the ON position, after 5 seconds, all the doors will lock. (Note: Central Locking is required for this feature)

When the key is turned OFF, all the doors will unlock.

*Factory setting is OFF.*

**Safety Re-arm** - If the Keyless Entry / Immobiliser system is accidentally disarmed whilst walking away from your vehicle and providing no doors are opened within 30 seconds, the Keyless Entry / Immobiliser will automatically re-arm and the doors will lock (Note: The doors will only lock if the vehicle is equipped with central locking)

*Factory setting is OFF.*

## OVERRIDE PROCEDURE

**Important Note:** Please ensure your authorised installer shows you where your override button is located after the installation has been completed.

In the event that a transmitter is lost, stolen or the transmitter battery has gone flat, please refer to the override procedure below.

1. Open the drivers door (the indicators or parking lights will start flashing)
2. Turn the Ignition Key to the 'ON' position.
3. Press the override button once.
4. The Immobiliser system will now be disarmed and the vehicle may be started.



Override Button



Distributed by:

ZYLUX DISTRIBUTION PTY. LTD.  
166 Christmas Street, Fairfield, Vic, 3078

Website: [www.zylux.com.au](http://www.zylux.com.au)

Email: [info@zylux.com.au](mailto:info@zylux.com.au)

Tel: (03) 9482 2203