

*Model: ZVS-380*



# ***OWNERS MANUAL***



**Remote Controlled Keyless Entry /  
Alarm / Immobiliser System**

12/03 – ZVS-380

Thank you for purchasing the ZVS-380 Vehicle Security System, Please carefully read this Owners Manual to familiarise yourself with the operation of the alarm system.

## CONTENTS


<i>Arming / Disarming the Alarm System</i>	<i>Page 2</i>
<i>Disarming the Alarm while the siren is sounding / Features</i>	<i>Page 3</i>
<i>Features continued .....</i>	<i>Page 4</i>
<i>Selectable Features / Diagnostics Report</i>	<i>Page 5</i>
<i>Override Procedure / Optional Accessories</i>	<i>Page 6</i>

### **Arming the Alarm system.**

Press Button 1 on the remote transmitter, the siren will chirp once, the indicators (or parking lights) will flash once and the doors will lock (optional).\* Vehicle will be immobilised if the starter disable is connected. The dash mounted LED will begin to flash once per second.

If the siren chirps twice when the alarm is activated, this indicates that either, the door, boot or bonnet is still open or not closed properly. (Note: Vehicles with an interior light delay may also cause the siren to chirp twice when the alarm is activated)

#### **Remote Transmitter**

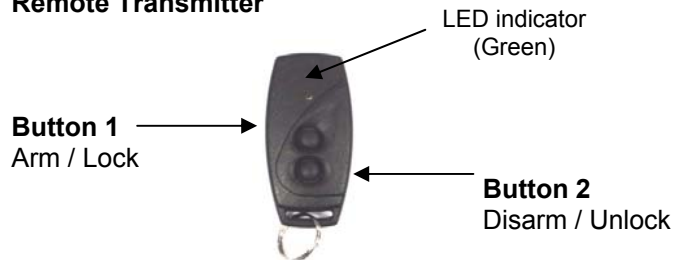

### **Disarming the Alarm system.**

Press Button 2 on the remote transmitter, the siren will chirp twice, the indicators (or parking lights) will flash twice and the doors will unlock (optional)

The Status LED Indicator will stop flashing.

If the siren chirps three times when the alarm is deactivated, this indicates the alarm was triggered in your absence. (Refer Page #5)

### **Disarming the Alarm system if the siren is sounding..**

If the alarm has been triggered and the siren is sounding, press Button 2 once to stop the siren from sounding. (Alarm remains armed)

To deactivate the alarm system and unlock the doors (If connected to central locking) press Button 2 again.

## **FEATURES**

**Door, Boot, Bonnet Protection** - When the alarm is armed, if any of these entry points are opened, the alarm will trigger for 30 seconds and the LED will flash rapidly. If these entry points are tripped more than 3 times, the alarm will automatically bypass these zones.

(Zones are re-activated once alarm is disarmed then re-armed)

**Remote Panic** - When activated, the siren will sound and indicators (or parking lights) will flash continuously.

To activate the *Panic* feature, press and hold Button 1 for two seconds.

To deactivate remote panic, press Button 2.

**Dual Stage Shock Sensor** - This sensor is designed to detect both light and heavy impacts to the vehicle's body.

This sensor is fully adjustable by your authorised installer.

At the time of installation, the shock sensor will be adjusted to the appropriate setting. Once the alarm system is activated, the shock sensor continually monitors for impact to the body of the vehicle.

The Shock sensor has two levels of sensitivity.

**Warning Chirps** - Siren Chirps 3 times if the vehicle's body receives a light impact. If the Warning Chirp stage is tripped more than five times, the Warning Chirps sensor will be temporarily disabled until the system is disarmed and then re-armed. All remaining triggers remain active.

**Full Trigger** - Siren sounds for a 30 second cycle if the vehicle's body receives a heavy impact. If the Full Trigger Stage is tripped more than three times, the Full Trigger sensor will be temporarily disabled until the system is disarmed and then re-armed. All remaining triggers remain active.

**LED** - The dash mounted LED will flash at a rate of once per second when the alarm is ON.

**Valet / Service Mode** - Valet / Service mode prevents the alarm from arming if the automatic arming feature is selected.

Valet / Service Mode disables the alarm system.

To activate Valet / Service mode, turn the ignition ON, close all the vehicles entry points (doors / boot / bonnet) and press and hold Button 2 for two seconds. The siren will chirp once (indicators or parking lights will flash once) and the LED will turn solid Red to indicate the system is in Valet / Service Mode

To deactivate Valet / Service mode, turn the ignition ON, close all the entry points (doors / boot / bonnet) and press and hold Button 2 for two seconds. The siren will chirp twice (indicators or parking lights will flash twice) and the LED will turn OFF to indicate that Valet / Service mode has been deactivated.

**\*Omni Lock** - The vehicles doors can be locked and unlocked by using the remote transmitter whilst the ignition is on. (\*Note: Vehicle must be equipped with central locking)

**Temporary Silent Arm / Disarm** – Press Buttons 1 and 2 simultaneously to arm the alarm silently. Press Button 2 to disarm the alarm silently.

**Last Stage Arming Memory** – If Alarm is armed and the vehicle's battery is disconnected, when the battery is re-connected the alarm system will remain armed.

**Remote Control Code Learning** – The Alarm system can hold up to four Remote Controls. At any time a lost or stolen remote transmitter can be deleted from memory by your authorised installer.

**\* Locking Outputs** - If your vehicle is equipped with central locking, the alarm system can be connected so the doors will lock when the alarm is armed and unlock when disarmed.

**\* Remote Boot Release** - Press and hold Button 2 for two seconds, the siren will chirp once and the boot will open. (Vehicle must contain electronic boot release for this feature to work)

**\* Starter Disable / Immobiliser** – Once the Alarm is activated, the vehicle will be immobilised. The starter motor circuit will be interrupted. Once the Alarm is deactivated, the immobiliser will be deactivated.

**\* Optional Features - Additional parts and labour may be required.**

## SELECTABLE FEATURES

The features listed below may be configured at the time of installation. These features can only be programmed by your authorised installer.

**Ignition Safety Door Lock / Unlock** - If all doors are closed when the ignition key is turned to the ON position, after 5 seconds, all the doors will lock. (Note: Central Locking is required for this feature) When the key is turned OFF, all the doors will unlock.

*Factory setting is OFF.*

**Safety Re-arm** - If the alarm system is accidentally disarmed whilst walking away from your vehicle and providing no entry points (doors / boot / bonnet) are opened within 30 seconds, the alarm will automatically re-arm and the doors will lock (Note: The doors will only lock if the vehicle is equipped with central locking)

*Factory setting is OFF.*

**Automatic Arming** - After the ignition is turned OFF and if the alarm system is not armed manually by the user, the alarm (only) will automatically arm 30 seconds after the last door has been closed.

*Factory setting is OFF.*

**Automatic Locking** - If automatic arming is selected, when the alarm system arms automatically the doors will lock. (Note: This feature will only work if the vehicle is equipped with central locking)

*Factory setting is OFF.*

**Silent Arm / Disarm** - If silent arm / disarm is selected, when the system is armed (Button 1 is pressed) and disarmed (Button 2 is pressed), only the indicators (or parking light) will flash for confirmation. The siren will not chirp.

*Factory setting is OFF.*

## DIAGNOSTICS REPORT

If the alarm has been triggered in your absence (siren has chirped 3 times when alarm system is disarmed and the LED is flashing rapidly) please turn the ignition on and the LED will identify which sector has been triggered.

Flashes	Trigger
3 flashes per cycle	Shock Sensor
6 flashes per cycle	Door, Boot or Bonnet

## OVERRIDE PROCEDURE

**Important Note:** Please ensure your authorised installer shows you where your override button is located after the installation has been completed.

In the event that a transmitter is lost, stolen or the transmitter battery has gone flat, please refer to the override procedure below.

1. Open the drivers door (the alarm will begin sounding and the indicators or parking lights will start flashing)
2. Turn the Ignition Key to the 'ON' position.
3. Press the override button once.
4. The alarm system will now be disarmed and the vehicle may be started.



Override Button

## \* OPTIONAL ACCESSORIES

### **Zylux Microwave Sensor – Part No: ZVS-MW-2**

(Detects movement inside the vehicle – Ideal for convertibles)

### **Tilt Sensor – Part No: ZVS-TS1**

(Detects vehicle being jacked up. Protects your wheels against theft)

### **Mini Battery BackUp Siren – Part No: ZBBS-1M**

(Siren will still sound even if vehicles battery or siren wires are disconnected)

### **Total Close Module (2 Windows) – Part No: ZVS-WCM-2**

(Automatically closes your 2 Electric Windows when the alarm is armed)

### **Total Close Module (4 Windows) – Part No: ZVS-WCM-4**

(Automatically closes your 4 Electric Windows when the alarm is armed)

**Note:** Please check with your authorised installer whether these optional accessories will suit your vehicle. \* Additional Parts / Labour will apply



Distributed by:

ZYLUX DISTRIBUTION PTY. LTD.  
166 Christmas Street, Fairfield, Vic, 3078  
Website: [www.zylux.com.au](http://www.zylux.com.au)  
Email: [info@zylux.com.au](mailto:info@zylux.com.au)  
Tel: (03) 9482 2203